


INSTRUKCJA OBSŁUGI STEROWNIKA OGRZEWANIA / KLIMATYZACJI HEATING / AIR CONDITIONING CONTROLLER MANUAL

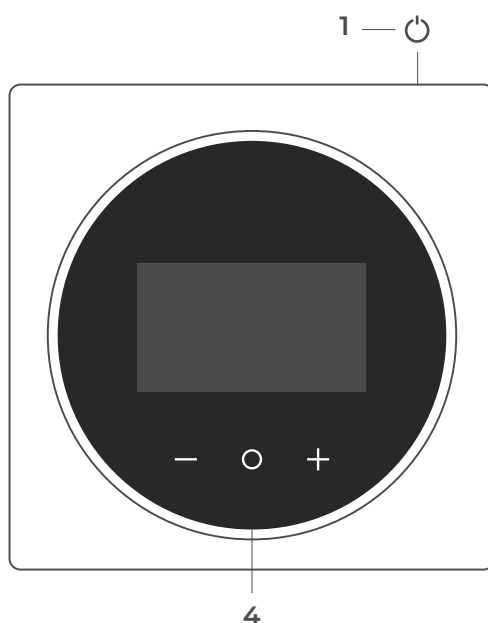

1. Aby uruchomić klimatyzację włoż kartę hotelową do czytnika i następnie naciśnij przycisk w prawym górnym rogu obudowy sterownika.
2. Klimatyzacja automatycznie się wyłączy w przypadku otwarcia okna/drzwi balkonowych lub wyjęcia karty z czytnika.
3. Aby wybrać tryb pracy klimatyzacji grzanie/chłodzenie naciśnij przycisk O, a następnie używając +/- nawiguj do zakładki trybu pracy. Wybierz dla chłodzenia ❄ lub dla grzania ☀.
4. Aby nastawić temperaturę użyj przycisków +/-.
5. Aby regulować siłę nadmuchu naciśnij przycisk O, a następnie używając +/- nawiguj do zakładki siły nadmuchu. Wybierz +/- dla stopnia nadmuchu.

W przypadku pytań, prosimy o kontakt z Recepcją.

1. To start the air conditioning, insert the hotel card into the reader and then press the button in the upper right corner of the controller housing.
2. The air conditioning will automatically turn off if the window/balcony door is opened or the card is removed from the reader.
3. To select heating/cooling operation mode, press the button O and then use +/- to navigate to the operation mode tab. Select for cooling ❄ or for heating ☀.
4. Use the +/- buttons to set the temperature.
5. To adjust the blower force, press the button and then use +/- to navigate to the blower force tab. Select +/- for the airflow rate.

In case of any questions, please contact the Reception.